



**Electronic Ballast for UVC-Lamps with adjustable Lamp Current**



**Wiring**

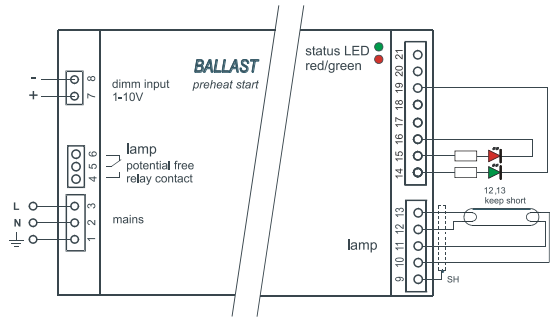

**Dimensions**

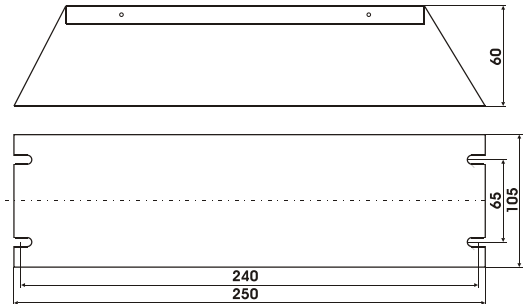

**Features**

- Lamp current adjustable in steps
- Dimm input 1-10 V
- Inrush current limiter
- Potential free relay contact
- Opportunity of potential free LED status indication

**Technical Data**

Type	LT-UVC 1x(200..480)W 2,8 A ..3,8 A
Supply	208/230 V AC ± 10 % 50/60 Hz
Input power min. / max.	220 W .. 530 W
Output power single lamp	200 W .. 480 W
Adjustable range of lamp current	(2,8 A / 3,2 A / 3,5 A / 3,8 A) ± 10 %
Powerfactor	> 0,95
Efficiency	> 0,9
Operating frequency	approx. 28..70 kHz
Inrush current	$\hat{I} < 40 \text{ A to } 30 \mu\text{s} / \hat{I} < 30 \text{ A to } 300 \mu\text{s}$
Relay Contact	1 changeover contact
Relay Contact – Maximum switching voltage	5 A 250 V AC / 5 A 24 V DC (resistive load)
Relay Contact – Minimum switching load	≥ 5 V DC / 10 mA
Dimm input	Analog 1..10 V DC
Dimm range	to minimal 60 % of lamp current
Standby power dissipation	approx. 2 W
CE-conformity	yes

**Type coding**

M	Potential free relay contact
D	Dimm input
B	Additional module – selection lamp current
F	Additional module – selection lamp current – connection external status LED (potential free)

**Adjustment of lamp current**

Adjustment by rotary switch on top of the ballast		Pos. 0..9:  No warranty for damages caused by incompatible lamps or wrong adjustments!
Lamp typ	On request	
Adjustment of lamp current parameters	Must be carried out before voltage application, switching during operation will not be detected	

**Adjustment of lamp current**

Schalter	Lampenstrom
0	2,8 A
1	reserviert
2	3,2 A
3	reserviert
4	3,5 A
5	3,8 A
6	reserviert
7	reserviert
8	reserviert
9	reserviert

**Monitoring**

Mains Control	Switch off at permanent under – or over voltage
Temperature	Switch off at permanent over temperature
Lamp presence	No start if no lamp is connected

**General indications**

Operation	LED green – works normal
Failure	LED red – failure, no operation
Potential free contact (PFK)	Relay on – works normal Relay off – failure or ballast does not start (Standby)

**State indications operation/failure**

Ballast status	PFK	LED green	LED red	Description	Cause
No start condition	Off	Permanent blink	Permanent blink	Ballast waits for start	- Under- or over voltage mains - Over temperature - No lamp connected
Ballast start / procedure	Off	Off	On	Lamp starts	
Ballast works trouble free	On	On	Off	Normal mode	
Failure Temperature	Off	Off	1x blinking	Cut off at over temperature Ambient temperature too high Temperature at tc too high	- Wrong installation - No heat dissipation , surface of housing too small
Under voltage mains	Off	Off	2x blinking	Switch off at wrong mains	- Mains voltage under limit
Over voltage mains	Off	Off	3x blinking	Switch off at wrong mains	- Mains voltage over limit
Failure lamp voltage	Off	Off	4x blinking	Switch off Lamp voltage out of tolerance	- Wrong lamp type in use - End of lamp life - Rectifier effect of lamp - Start with deactivated lamp
Failure over current half bridge	Off	Off	5x blinking	Switch off by over current half bridge (abnormal operation)	- Wrong lamp wiring - Shortage on lamp lines - Start without lamps

**Mounting instructions**

Designed for	Installations in switch cabinet
International protection	IP20
Dimension of case	(248 x 66 x 60) mm
Spacing fixing holes	240 mm
Installation position	Vertical, mains terminal below
Ambient temperature	ta = 0..40 °C
Temperature at tc-point	tc = 55 °C maximum case temperature

**Cabling**

Max. length of lamp cables	< 5 m
Max. capacitance of lamp cables	< 150 pF/m
Screened lamp cables permitted	yes

**Terminal blocks**

Mains	Cross section: 0,5–2,5 mm <sup>2</sup> (solid) Cross section: 0,5–1,5 mm <sup>2</sup> (fine-stranded with ferrule)
Lamp	Cross section: 0,5–2,5 mm <sup>2</sup> (solid) Cross section: 0,5–1,5 mm <sup>2</sup> (fine-stranded with ferrule)
Relay contact (PFK):	Cross section: 0,5–2,5 mm <sup>2</sup> (solid) Cross section: 0,5–1,5 mm <sup>2</sup> (fine-stranded with ferrule)
Dimm input:	Cross section: 0,2–1,5 mm <sup>2</sup> (solid) Cross section: 0,25–1,0 mm <sup>2</sup> (fine-stranded with ferrule)
external status LED	Cross section: 0,2–1,5 mm <sup>2</sup> (solid) Cross section: 0,25–1,0 mm <sup>2</sup> (fine-stranded with ferrule)

**Alternative-External LED state indication (additional module F necessary)**

LED state indication	for external installation in switch cabinet, potential free
Connection of 2 LED	LED green-operation / LED red-failure
Rated voltage for LED	12 V DC max. 20 mA (operation with external resistor )
LED driver	Short circuit protection

**Connection Alternative-External LED state indication (additional module F necessary)**

PIN	Allocation
14	Anode LED green (+12 V)
15	Anode LED red (+12 V)
16	Cathode LED red (GND)
19	Cathode LED green (GND)