


# Electronic Ballast for UVC-Lamps with adjustable Lamp Current

**Dimensions** 




## Wiring

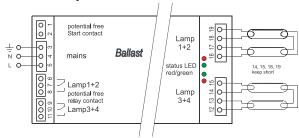

#### **Features**

- Controller based design (rapid start)
- Lamp current adjustable in steps
- 2 separate working lamp channels
- External/internal start alternatively
- Inrush current limiter
- 2 potential free relay contacts
- Opportunity of external potential free LED status indication

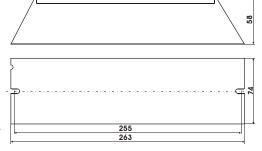

### Technical Data

Type	LT-UVC 4x (1540) W 0,35 A 0,8 A
Supply	230 V AC ± 10 % 50/60 Hz
Input power min. / max.	65 W 180 W
Output power four lamp application	4x15 W 4x40 W
Adjustable range of lamp current	$(350 \text{ mA} / 425 \text{ mA} / 550 \text{ mA} / 650 \text{ mA} / 800 \text{ mA}) \pm 10 \%$
Powerfactor	> 0,95
Efficiency	> 0,9
Operating frequency	approx. 2860 kHz
Inrush current	$\hat{I} < 40 \text{ A to } 30  \mu\text{s} / \hat{I} < 30 \text{ A to } 300  \mu\text{s}$
Relay Contact	1 changeover contact
Relay Contact – Maximum switching voltage	5A 250 V AC / 5 A 24 V DC (resistive load)
Relay Contact – Recommended range	≥ 12 V / 10 mA
External start input	10230 V AC / DC (potential free)
Number of starts	1 start / day recommended
Internal / external start	Adjustable by rotating switch
Independent	1 channel fails, other channel keeps in operation
Standby power dissipation	approx. 1 W
CE-conformity	yes

Type coding

R	Rapid start ballast
M	Potential free relay contact
Е	External start input
В	Additional module – selection lamp current
F	Additional module – selection lamp current
	<ul> <li>connection external status LED</li> </ul>
	(potential free)

**Einstellung Lampenstrom** 

Adjustment by rotary switch on top of the ballast $\begin{pmatrix} 9 & 0 & 1 \\ 8 & 7 & 4 & 3 \end{pmatrix}$	Pos. 04: internal start (local start) – ballast starts automatically after mains turn on  Pos. 59: external start (remote start) – ballast starts by external start signal at the start input  No warranty for damages caused by incompatible lamps or wrong adjustments!
Lamp typ	On request
Adjustment of lamp current parameters	Must be carried out before voltage application,
	switching during operation will not be detected

## LT ELEKTRONIK GERA GmbH



Adjustment of lamp current

Switch	Lamp current
0/5	350 mA
1/6	425 mA
2/7	550 mA
3/8	650 mA
4/9	800 mA

Monitoring

Mains Control	Switch off at permanent under – or over voltage
Temperature	Switch off at permanent over temperature
Lamp presence	No start if no lamp is connected
Deactivated lamp, rectifier effect	Switch off
Shortage on the lamp line	Switch off

### General indications

Operation	LED green – trouble free operation	
Failure	LED red – failure, no operation	
Potential free contact PFK	Relay on – trouble free operation	
	Relay off — failure or ballast does not start (Standby)	

State indications operation/failure

Ballast status	PFK	LED	LED	Description	Cause
		green	red	•	
No start condition	Off	Perma-	Perma-	Ballast waits for start	- Under- or over voltage mains
		nent	nent		- Over temperature
		blink	blink		- no lamp connected
					- No HI level at the external start input
Ballast start/ procedure	Off	On	On	Lamp starts	
Ballast works trouble free	Off	On	Off	Electronic ballast / lamp -	
				normal mode	
E i E	000	0.00	1	C + SS + + +	W 11 (
Failure Temperature	Off	Off	1x	Cut off at over temperature	- Wrong installation
			blinking	Ambient temperature too high	- No heat dissipation, surface of housing too small
T.T., d	Off	Off	2x	Temperature at tc to high	Maine college out to the
Under voltage mains	OII	OII	2X blinking	Switch off at wrong mains	- Mains voltage under limit
Over voltage mains	Off	Off	3x	Switch off at wrong mains	- Mains voltage over limit
Over voltage mans	OII	OII	blinking	Switch off at wrong mains	- Mains voltage over mint
Failure lamp voltage	Off	Off	4x	Switch off	- Wrong lamp type in use
Tantare many voltage	011	011	blinking	Lamp voltage out of tolerance	- End of lamp life
					- Deactivated lamp under operation
					- Rectifier effect of lamp
					- Start with deactivated lamp
Failure over current	Off	Off	5x	Switch off by over current	- Wrong lamp wiring
half bridge			blinking	half bridge	- Shortage on lamp lines
				(abnormal operation)	- Start without lamps

**Mounting instructions** 

Designed for	Installations in switch cabinet
International protection	IP20
Dimension of case	263 x 74 x 57 mm
Installation position	Vertical, mains terminal below
Ambient temperature	$ta = 040  ^{\circ}C$
Temperature at tc-point	tc = 50 °C max. maximum case temperature

Cabling

Max. length of lamp cables	< 5 m
Max. capacitance of lamp cables	< 150 pF/m
Screened lamp cables permitted	yes



## Terminal blocks

Mains	Cross section: 0,75–2,5 mm <sup>2</sup> (solid)
Wago 231-303 3 pole Spacing 5,08 mm	Cross section: 0,75–1,5 mm <sup>2</sup> (fine-stranded with ferrule)
Lamp	Cross section: 0,75–2,5 mm <sup>2</sup> (solid)
Wago 231-304 4 pole Spacing 5,08 mm	Cross section: 0,75–1,5 mm <sup>2</sup> (fine-stranded with ferrule)
potential free relay contacts	Cross section: 0,2–1,5 mm <sup>2</sup> (solid)
Wago 734-203 3 pole Spacing 3,81 mm	Cross section: 0,25–1,0 mm <sup>2</sup> (fine-stranded with ferrule)
external start input	Cross section: 0,2–1,5 mm <sup>2</sup> (solid)
Wago 734-202 2 pole Spacing 3,81 mm	Cross section: 0,25–1,0 mm <sup>2</sup> (fine-stranded with ferrule)

Alternative - External LED state indication (additional module F necessary)

<u> </u>	
LED state indication	for external installation in switch cabinet, potential free
Connection of 2 LED	LED green-operation / LED red-failure
Rated voltage for LED	12 V DC max. 20 mA (operation with external resistor)
LED driver	Short circuit protection

Alternative - Mounting external LED state indication (additional module F necessary)

Aiteinativ	C ::Garierig exterma: 222 St	tate maleation (additional module i necessary)
PIN	Allocation	1———
1	+12 V	2
2	+12 V	
3	GND LED red channel 1	
4	GND LED red channel 2	
5	GND LED green channel 2	
6	GND LED green channel 1	6———