


Electronic Ballast for UVC-Lamps with adjustable Lamp Current




Wiring

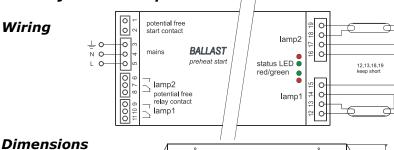

Features

- Controller based design (Cut-Off preheat start)
- Lamp current adjustable in steps
- 2 separate working lamp channels
- External/internal start alternatively
- Inrush current limiter
- 2 potential free relay contacts
- Opportunity of external potential free LED status indication

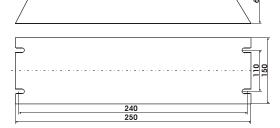

Technical Data

recinical Bata	
Type	LT-UVC 2x(150320) W 1,8 A2,9 A
Supply	208/230 V AC ± 10 % 50/60 Hz
Input power min. / max.	330 W 710 W
Output power two lamp application	2x150 W 2x320 W
Adjustable range of lamp current	$(1.8 \text{ A} / 2.0 \text{ A} / 2.1 \text{ A} / 2.5 \text{ A} / 2.9 \text{ A}) \pm 10 \%$
Powerfactor	> 0,95
Efficiency	> 0,9
Operating frequency	approx. 2845 kHz
Inrush current	$\hat{I} < 40 \text{ A to } 30 \mu\text{s} / \hat{I} < 30 \text{ A to } 300 \mu\text{s}$
Relay Contact	1 changeover contact
Relay Contact – Maximum switching voltage	5 A 250 V AC / 5 A 24 V DC (resistive load)
Relay Contact – Recommended range	\geq 12 V / 10 mA
External start input	10230 V AC / DC (potential free)
Internal / external start	Adjustable by rotating switch.
Independent	1 channel fails, other channel keeps in operation
Standby power dissipation	approx. 2 W
CE-conformity	yes

Type codina

<u> </u>	
С	Preheat start ballast (Cut-Off Technology)
M	Potential free relay contact
Е	External start input
В	Additional module – selection lamp current
F	Additional module – selection lamp current
	 connection external status LED
	(potential free)

Adjustment of lamp current

rajasement or ramp carrent	
Adjustment by rotary switch on top of the ballast $\begin{pmatrix} 9 & 0 & 1 \\ 8 & & & & \\ & & & & \\ & & & & \\ & & & &$	Pos. 04: internal start (local start) – ballast starts automatically after mains turn on Pos. 59: external start (remote start) – ballast starts by external start signal at the start input No warranty for damages caused by incompatible lamps
	or wrong adjustments!
Lamp typ	On request
Adjustment of lamp current parameters	Must be carried out before voltage application,
	switching during operation will not be detected

LT ELEKTRONIK GERA GmbH



Adjustment of lamp current

Switch	Lamp current	preheat current maximal
0/5	1,8 A	2,9 A
1/6	2,0 A	2,1 A
2/7	2,1 A	2,9 A
3/8	2,5 A	2,9 A
4/9	2,9 A	3,6 A

Monitoring

Mains Control	Switch off at permanent under – or over voltage
Temperature	Switch off at permanent over temperature
Lamp presence	No start if no lamp is connected
Deactivated lamp, rectifier effect	Switch off
Shortage on the lamp line	Switch off
End of life lamp	Switch off

General indications

Operation	LED green – trouble free operation
Failure	LED red – failure, no operation
Over temperature indication (blink mode)	LED yellow – prewarning for switch off
Potential free contact PFK	Relay on — trouble free operation
	Relay off – failure or ballast does not start (Standby)

State indications operation/failure

Ballast status	PFK	LED	LED	Description	Cause
		green	red		
No start condition	Off	Perma-	Perma-	Ballast waits for start	- Under- or over voltage mains
		nent	nent		- Over temperature
		blink	blink		- no lamp connected
					- No HI level at the external start input
Ballast start/ procedure	Off	On	On	Lamp starts	
Ballast works trouble free	On	On	Off	Electronic ballast / lamp – normal mode	
Failure Temperature	Off	Off	1x	Cut off at over temperature	- Wrong installation
			blinking	Ambient temperature too high	- No heat dissipation, surface of housing too small
I I - d 14	Off	Off	2	Temperature at tc to high	M-i1
Under voltage mains	OII	Oli	2x blinking	Switch off at wrong mains	- Mains voltage under limit
Over voltage mains	Off	Off	3x	Switch off at wrong mains	- Mains voltage over limit
			blinking		
Failure lamp voltage	Off	Off	4x	Switch off	- Wrong lamp type in use
			blinking	Lamp voltage out of tolerance	- End of lamp life
					- Deactivated lamp under operation
					- Rectifier effect of lamp
					- Start with deactivated lamp
Failure over current	Off	Off	5x	Switch off by over current	- Wrong lamp wiring
half bridge			blinking	half bridge	- Shortage on lamp lines
				(abnormal operation)	- Start without lamps

Mounting instructions

rounting metactions		
Designed for	Installations in switch cabinet	
International protection	IP20	
Dimension of case	250 x 150 x 60 mm	
Installation position	Vertical, mains terminal below	
Ambient temperature	$ta = 040 ^{\circ}\text{C}$	
Temperature at tc-point	tc = 50 °C max. maximum case temperature	

Cabling

Max. length of lamp cables	< 5 m
Max. capacitance of lamp cables	< 150 pF/m
Screened lamp cables permitted	yes

LT-UVC 2x(150..320)W-C/M/E/B 1,8..2,9A

Terminal blocks

Mains	Cross section: 0,75–2,5 mm ² (solid)
Wago 231-303 3 pole Spacing 5,08 mm	Cross section: 0,75–1,5 mm ² (fine-stranded with ferrule)
Lamp	Cross section: 0,75–2,5 mm ² (solid)
Wago 231-304 4 pole Spacing 5,08 mm	Cross section: 0,75–1,5 mm ² (fine-stranded with ferrule)
potential free relay contacts	Cross section: 0,2–1,5 mm ² (solid)
Wago 734-203 3 pole Spacing 3,81 mm	Cross section: 0,25–1,0 mm ² (fine-stranded with ferrule)
external start input	Cross section: 0,2–1,5 mm ² (solid)
Wago 734-202 2 pole Spacing 3,81 mm	Cross section: 0,25–1,0 mm ² (fine-stranded with ferrule)

Alternative - External LED state indication (additional module F necessary)

	tion (additional module)
LED state indication	for external installation in switch cabinet, potential free
Connection of 2 LED	LED green-operation / LED red-failure
Rated voltage for LED	12 V DC max. 20 mA (operation with external resistor)
LED driver	Short circuit protection

Alternative - Mounting external LED state indication (additional module F necessary)

7 11 00 1 11 01 01 1	C ::Garierig externar 222 8	tate maleation (additional module i necessary)
PIN	Allocation	1
1	+12 V	2
2	+12 V	
3	GND LED red channel 1	
4	GND LED red channel 2	
5	GND LED green channel 2	
6	GND LED green channel 1	6—